
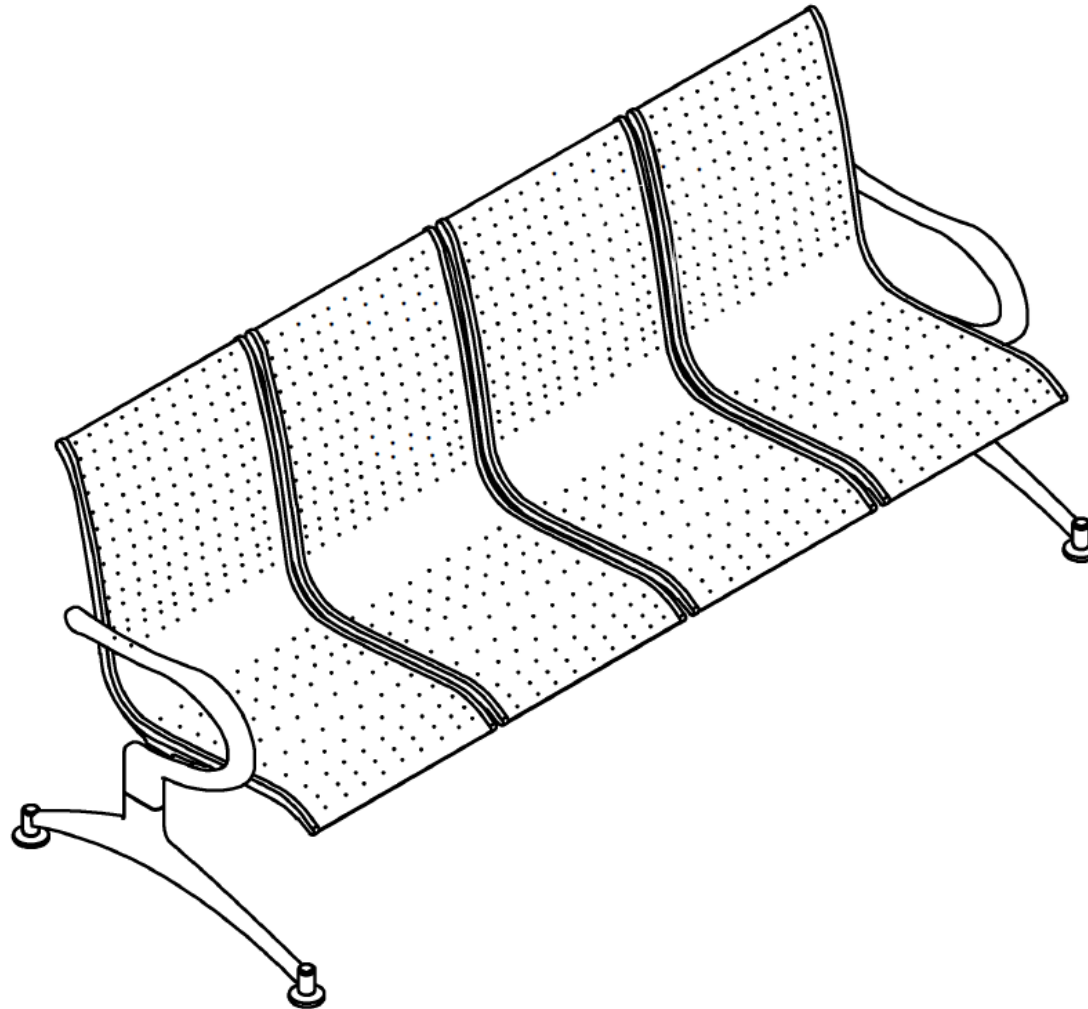
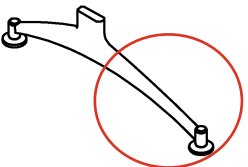


**452030, 452034, 452038, 452042, 452072**

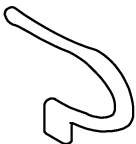

|                                                                                   |                                                                                                    |     |    |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----|----|
|   |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X4 |
|  |                                                                                                    |     | X1 |
|  |                                                                                                    |     | X8 |
| A                                                                                 | <br>M10x100     | X4  |    |
| B                                                                                 | <br>M8x12       | X32 |    |
| C                                                                                 | <br>M8x16       | X16 |    |
|                                                                                   | <br>M10x120     | X1  |    |
|                                                                                   | <br>M8x85       | X1  |    |
|                                                                                   | <br>Ø12x1.0x120 | X1  |    |

1

(CZ) Delší strana podnože musí být namontována směrem dopředu, jinak se může zlomit!

2




M8x12

3


M8x16

4

M8x16

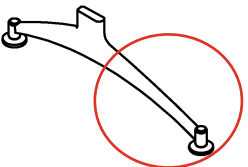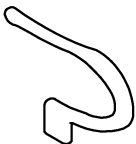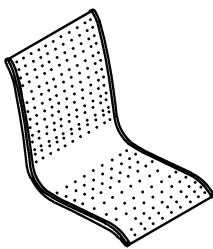
|                                                                                   |                                                                                                    |     |    |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----|----|
|   |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X4 |
|  |                                                                                                    |     | X1 |
|  |                                                                                                    |     | X8 |
| A                                                                                 | <br>M10x100     | X4  |    |
| B                                                                                 | <br>M8x12       | X32 |    |
| C                                                                                 | <br>M8x16       | X16 |    |
|                                                                                   | <br>M10x120     | X1  |    |
|                                                                                   | <br>M8x85       | X1  |    |
|                                                                                   | <br>Ø12x1.0x120 | X1  |    |

1

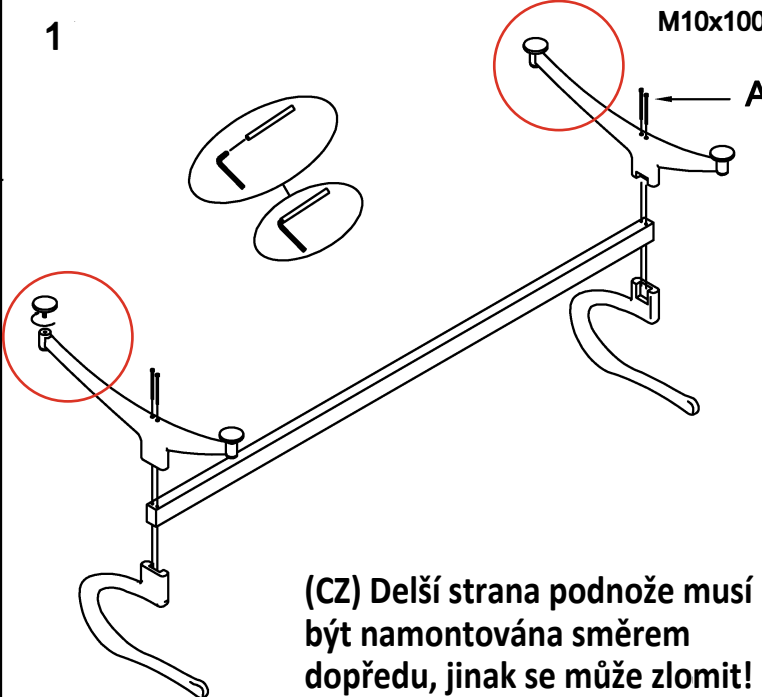


(CZ) Delší strana podnože musí být namontována směrem dopředu, jinak se může zlomit!

2

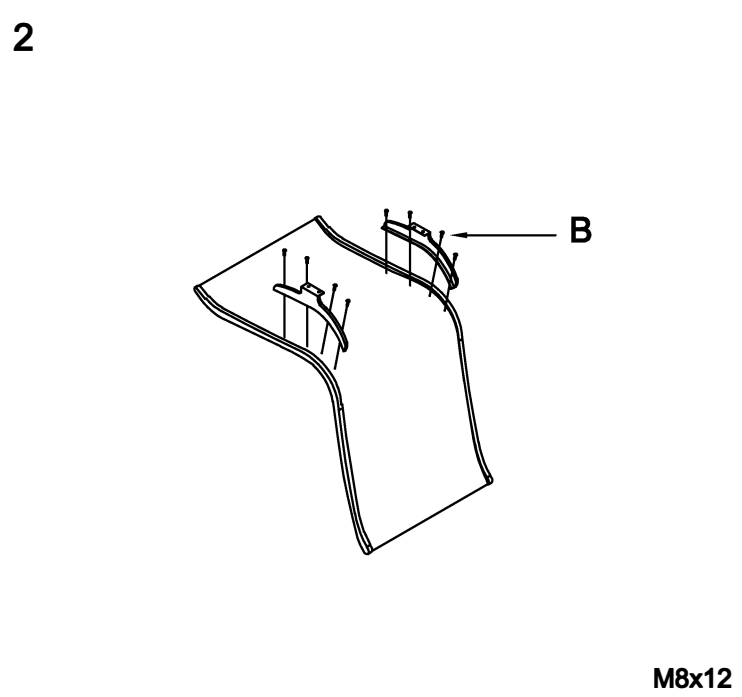


M8x12

3



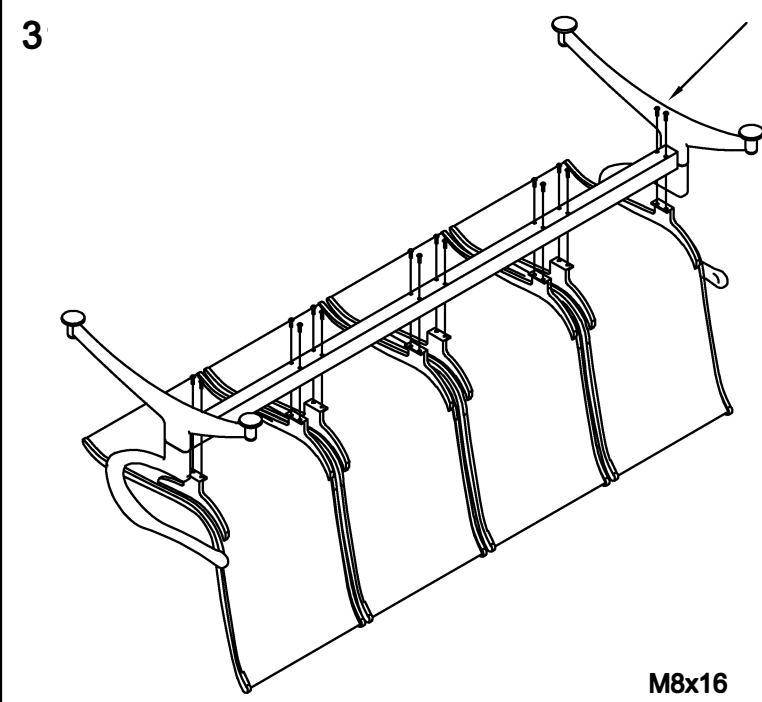


M8x16


4

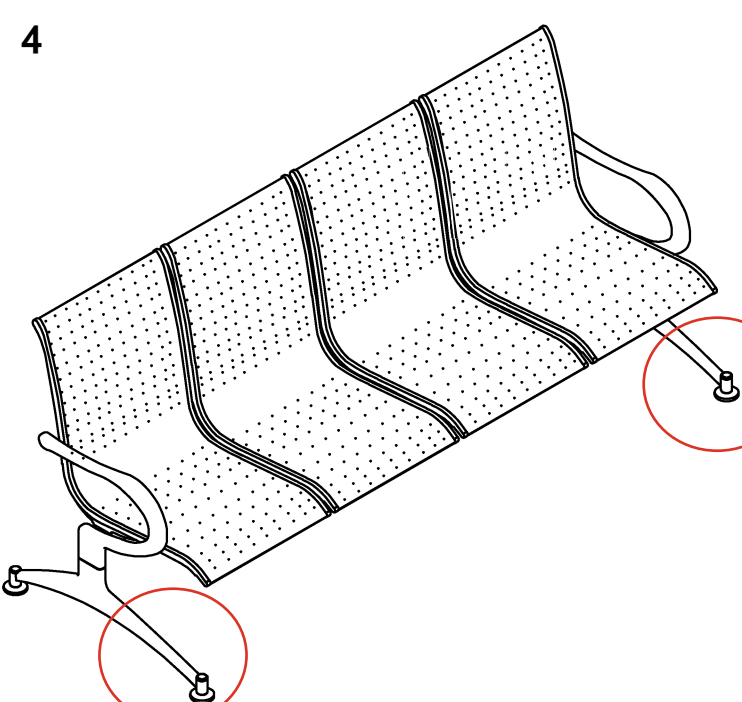

M8x16

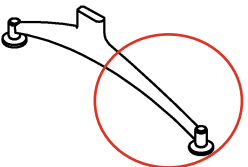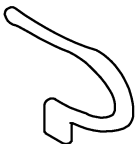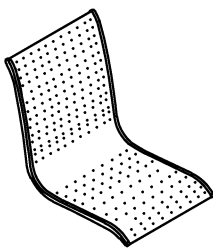
|                                                                                   |                                                                                                    |     |    |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----|----|
|   |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X2 |
|  |                                                                                                    |     | X4 |
|  |                                                                                                    |     | X1 |
|  |                                                                                                    |     | X8 |
| A                                                                                 | <br>M10x100     | X4  |    |
| B                                                                                 | <br>M8x12       | X32 |    |
| C                                                                                 | <br>M8x16       | X16 |    |
|                                                                                   | <br>M10x120     | X1  |    |
|                                                                                   | <br>M8x85       | X1  |    |
|                                                                                   | <br>Ø12x1.0x120 | X1  |    |

1

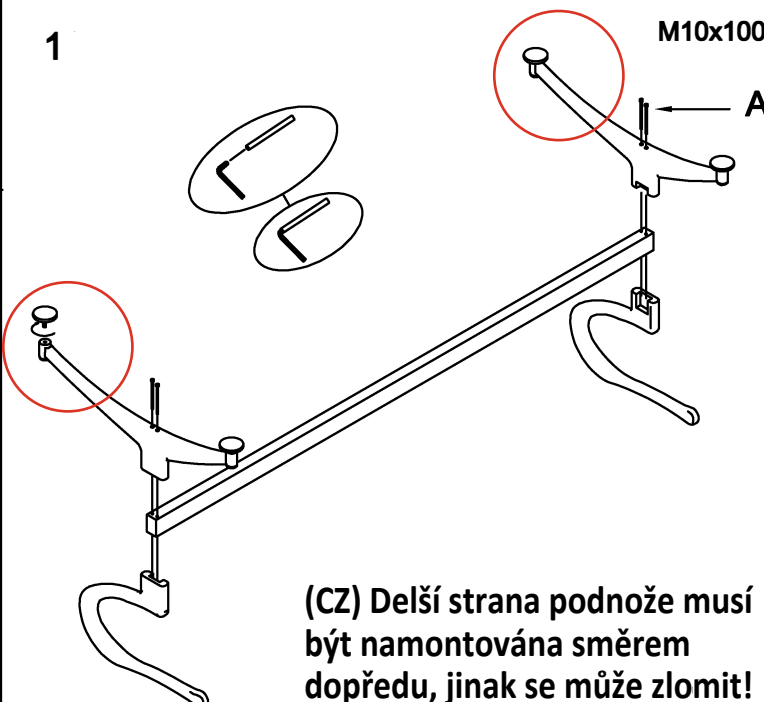


(CZ) Delší strana podnože musí být namontována směrem dopředu, jinak se může zlomit!

2

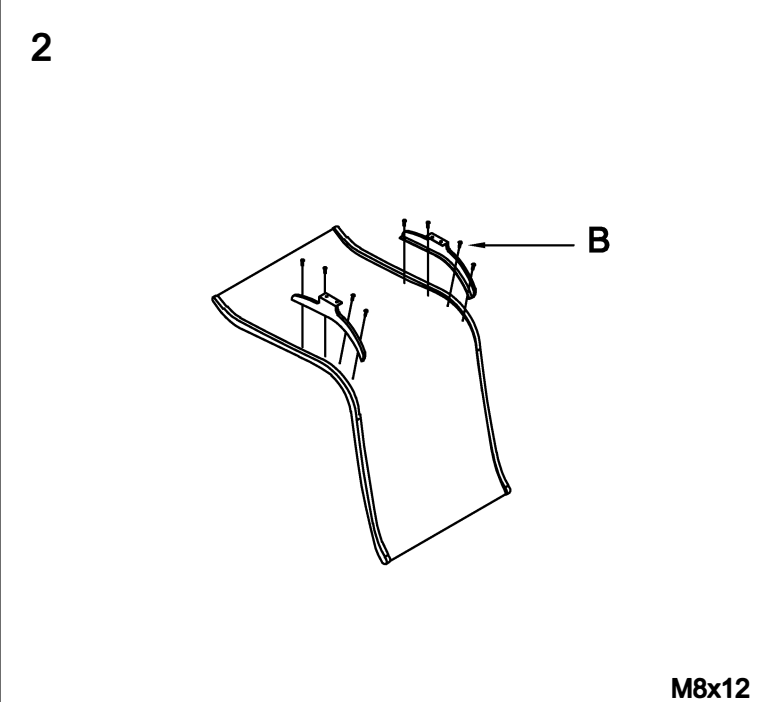

M8x12

3

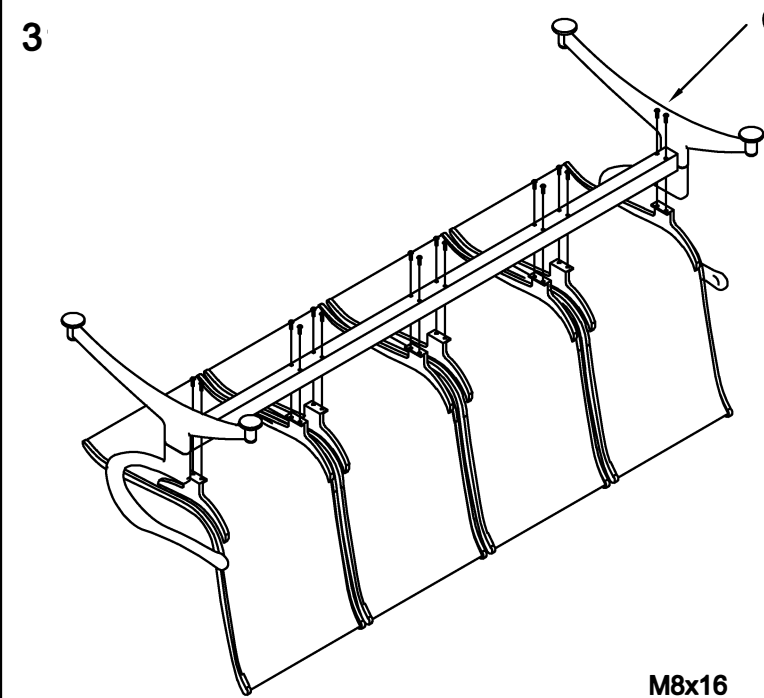

M8x16

4

