

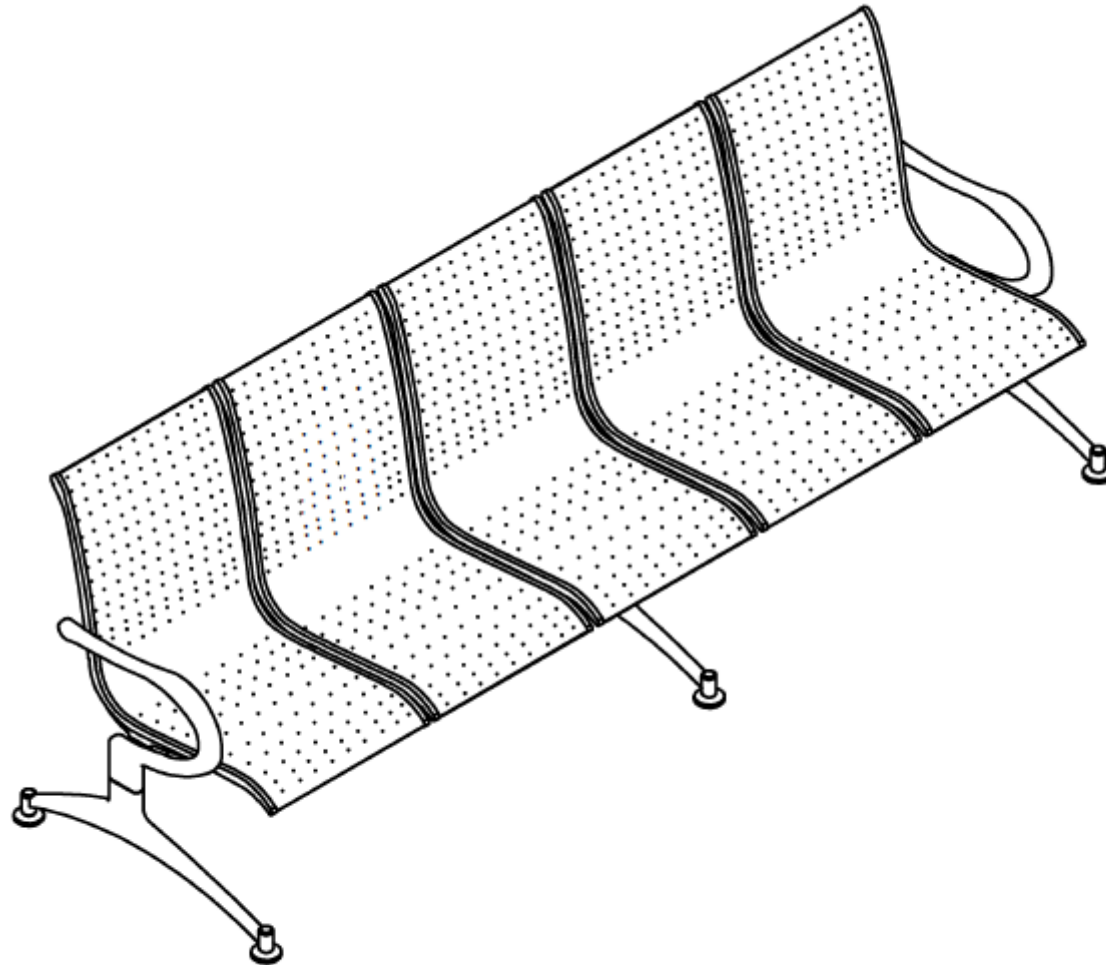
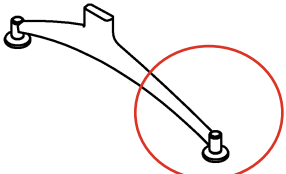
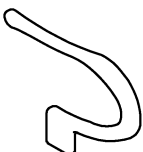
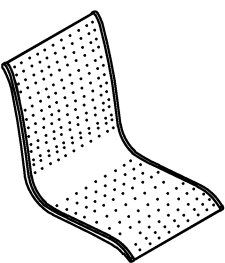


452031, 452035, 452039, 452043, 452073

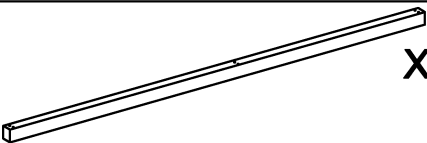


			X3
			X2
			X5
			X1
			X10
A	 M10x100	X6	
B	 M8x12	X40	
C	 M8x16	X20	
	 M10x120	X1	
	 M8x85	X1	
	 Ø12x1.0x120	X1	

1

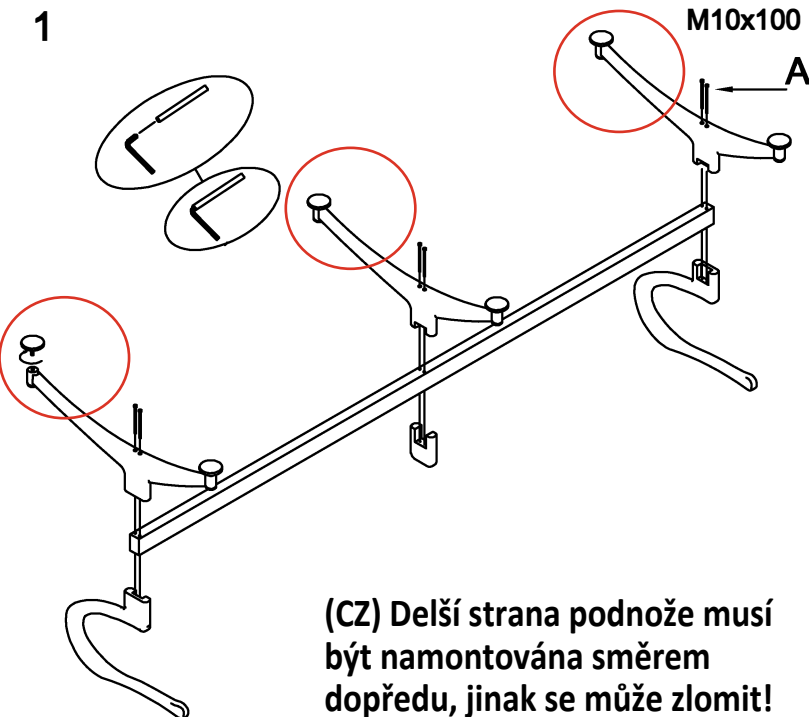


(CZ) Delší strana podnože musí být namontována směrem dopředu, jinak se může zlomit!

2

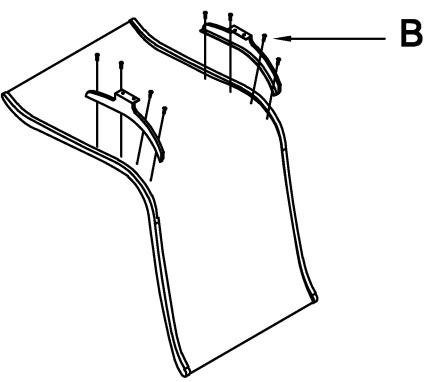


M8x12





3

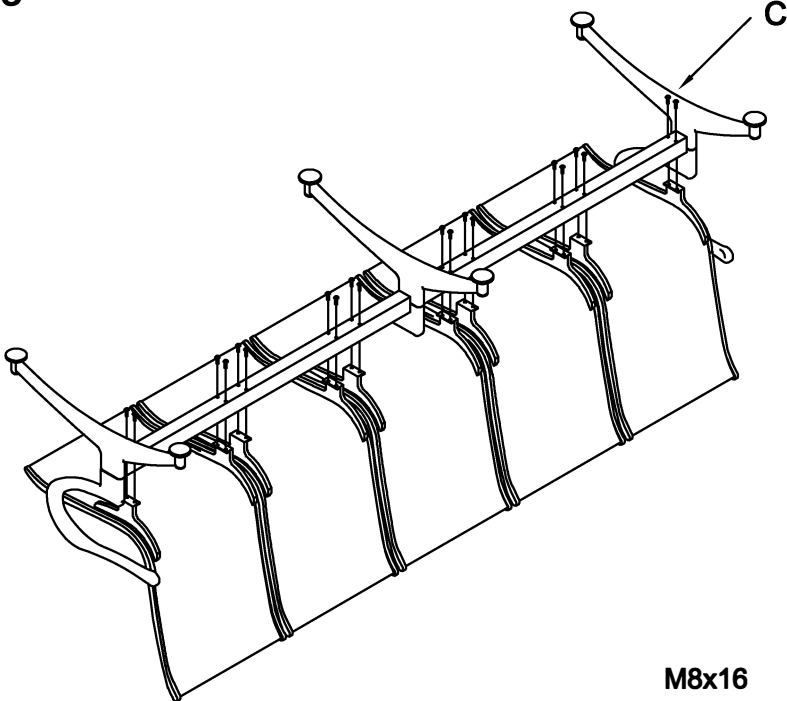


M8x16

4

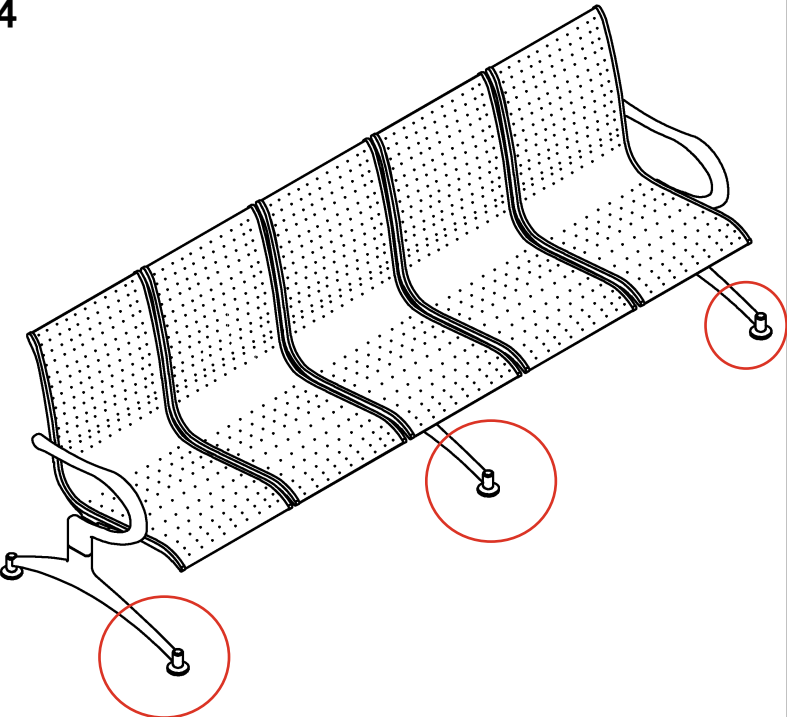

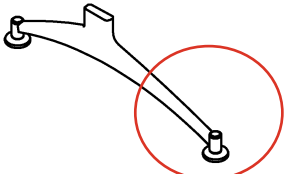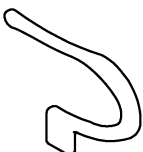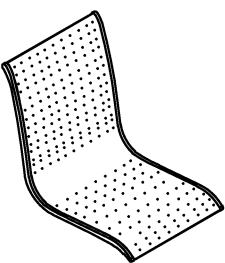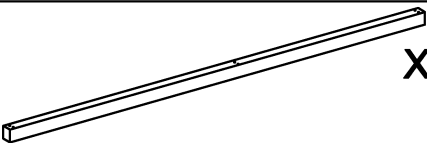			X3
			X2
			X5
			X1
			X10
A	 M10x100	X6	
B	 M8x12	X40	
C	 M8x16	X20	
	 M10x120	X1	
	 M8x85	X1	
	 Ø12x1.0x120	X1	


1

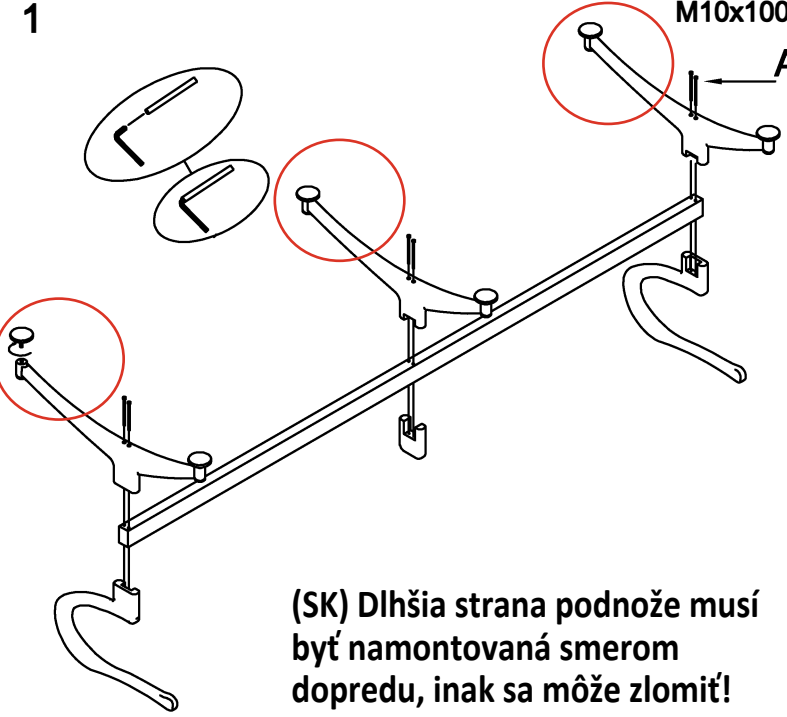

M10x100
A

(SK) Dlhšia strana podnože musí byť namontovaná smerom dopredu, inak sa môže zlomiť!


2

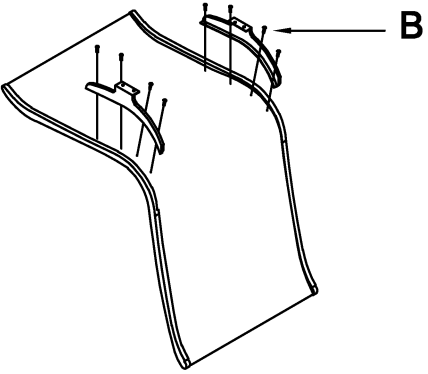

B

M8x12


3




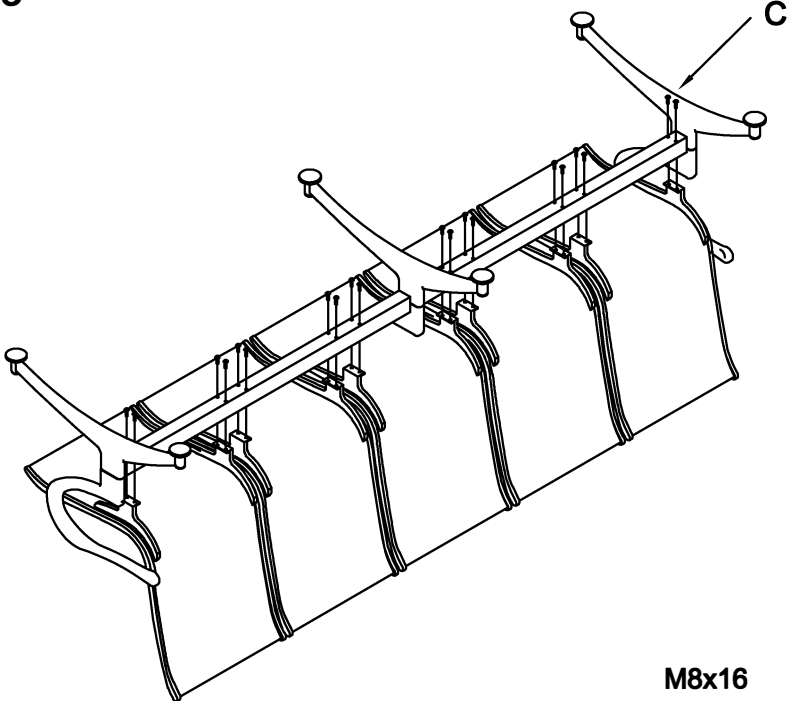


C


M8x16

4

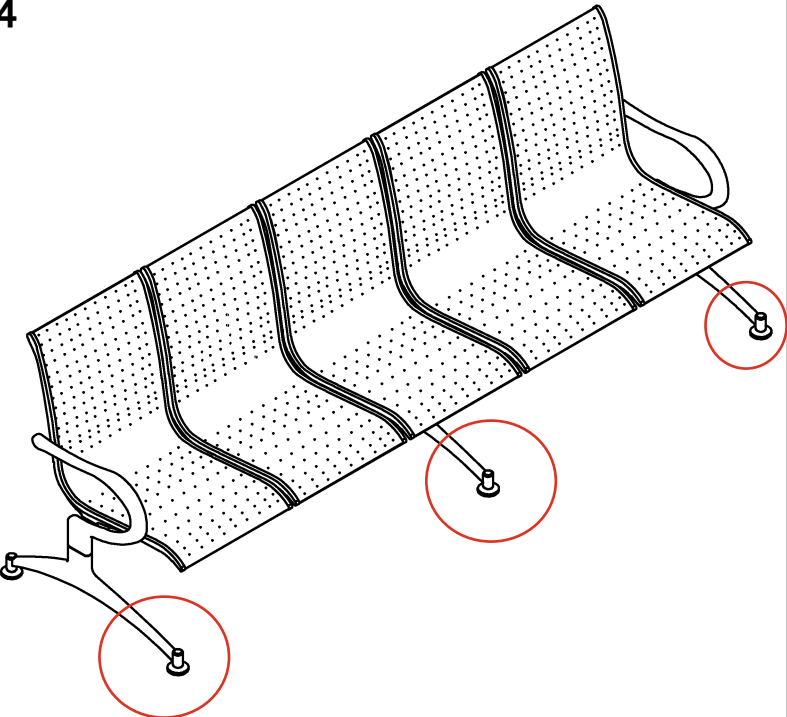

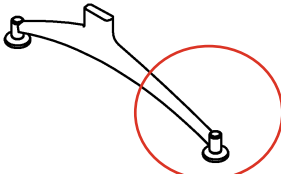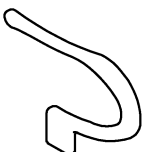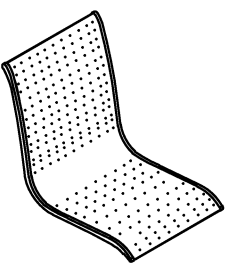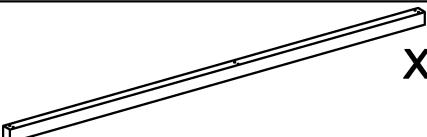			X3
			X2
			X5
			X1
			X10
A	 M10x100	X6	
B	 M8x12	X40	
C	 M8x16	X20	
	 M10x120	X1	
	 M8x85	X1	
	 Ø12x1.0x120	X1	

1

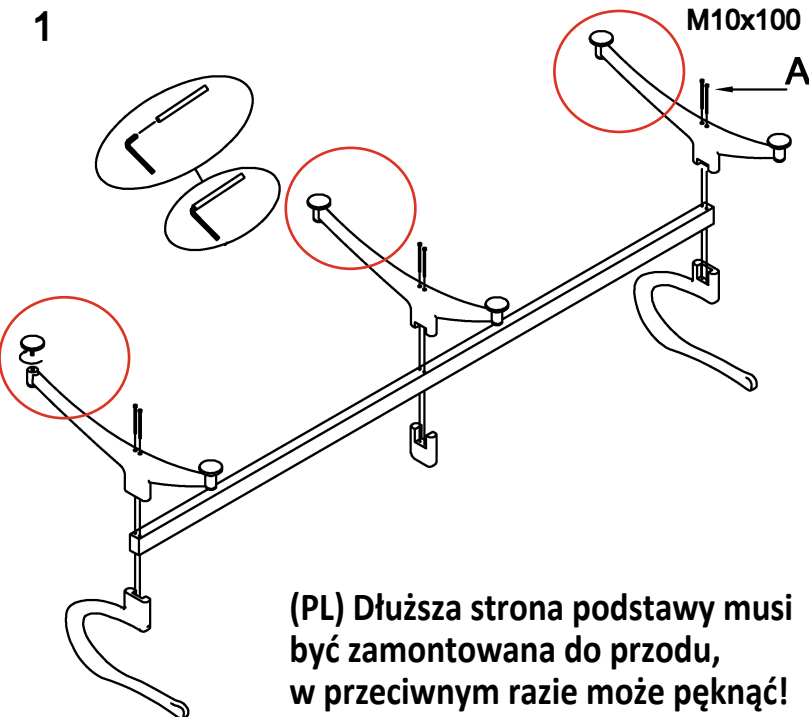


M10x100

A

(PL) Dłuższa strona podstawy musi być zamontowana do przodu, w przeciwnym razie może pęknąć!


2

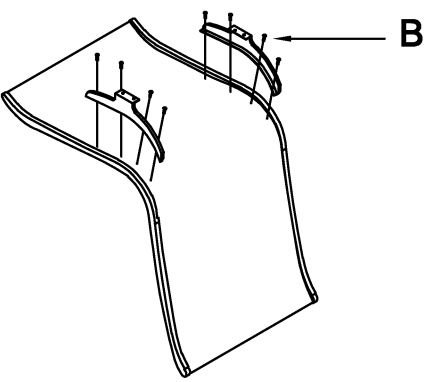

B

M8x12


3

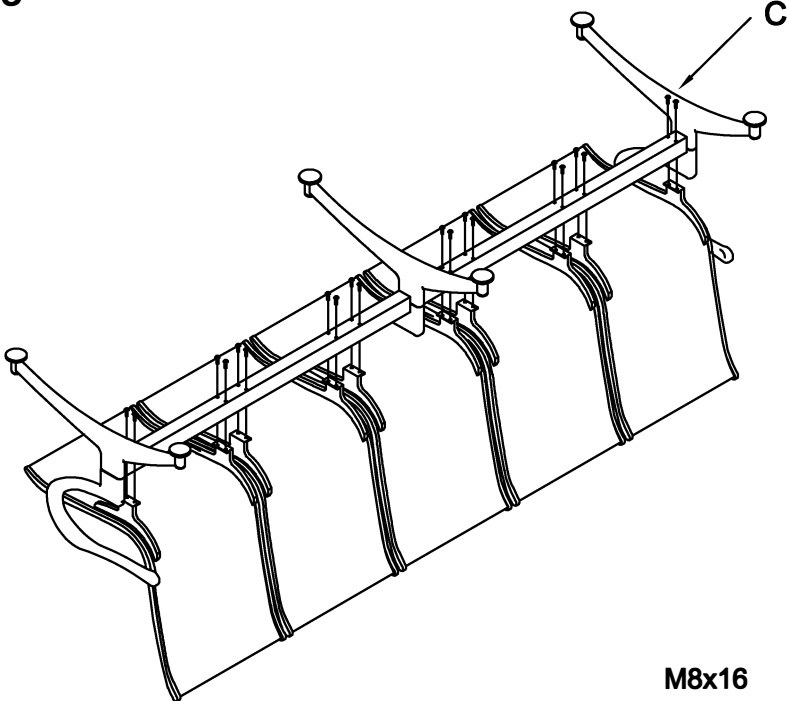





C

M8x16


4

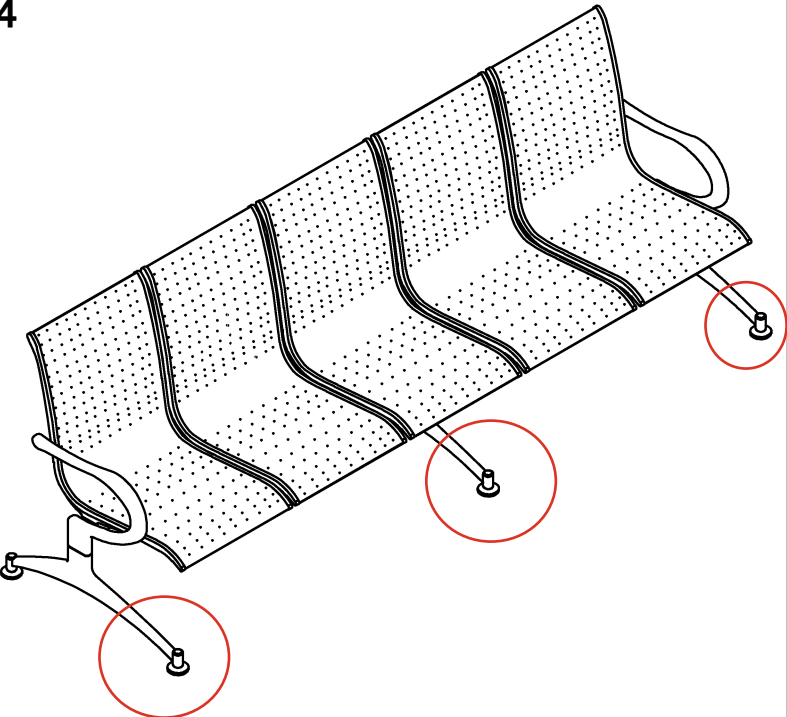

M8x12

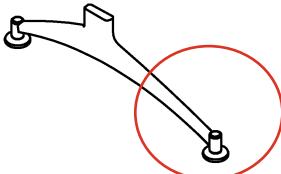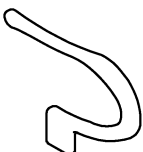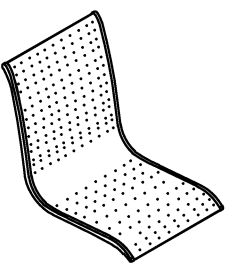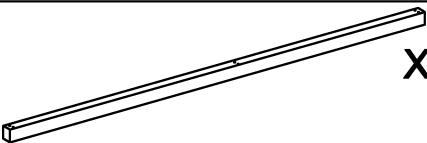			X3
			X2
			X5
			X1
			X10
A	 M10x100	X6	
B	 M8x12	X40	
C	 M8x16	X20	
	 M10x120	X1	
	 M8x85	X1	
	 Ø12x1.0x120	X1	

1

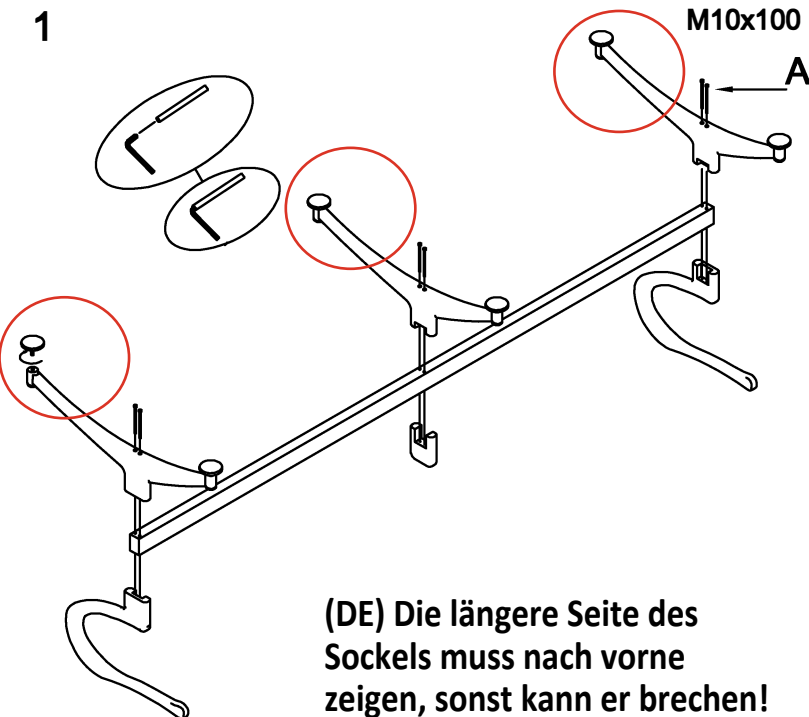


M10x100

A

(DE) Die längere Seite des Sockels muss nach vorne zeigen, sonst kann er brechen!


2

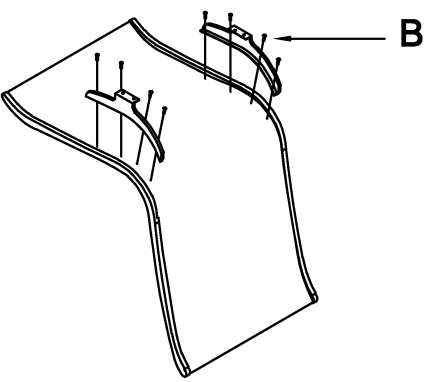

B

M8x12

3

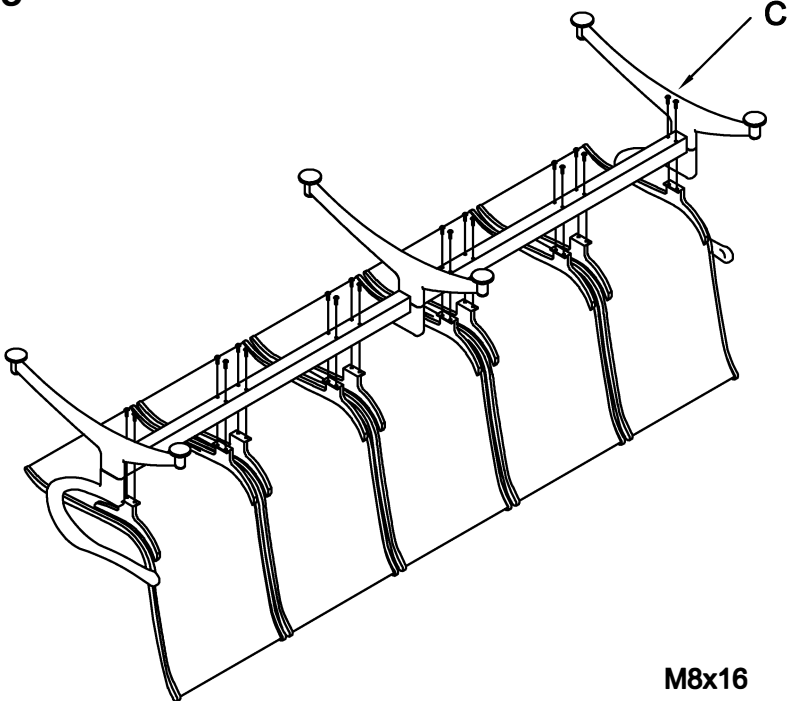

C

M8x16

4

